


GARNET ball M

USER MANUAL

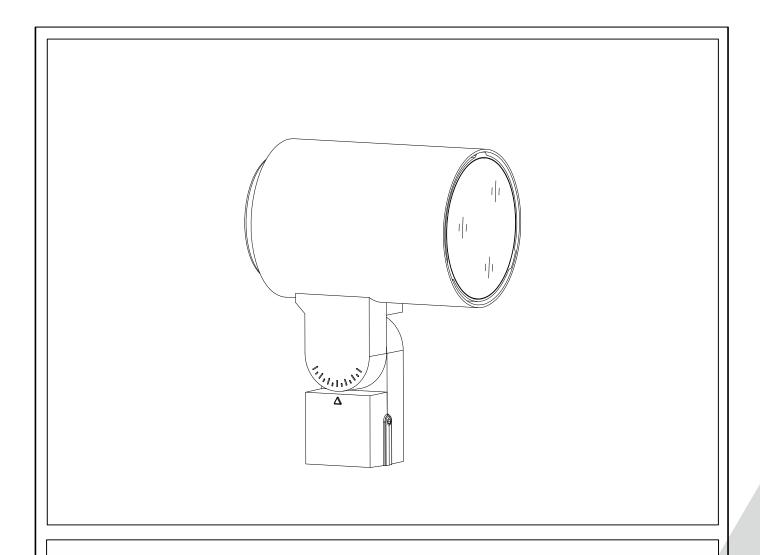



- I. The luminaire shall be installed by a qualified electrician and wired in accordance with the latess IEE electrical regulations or the national requirements.
- 2. No supplied water-proof box, installation should be adviced by qualified professional.
- 3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.






Enterprise_statement:


①LED laser raditation of luminaire is not greater than the limit of Risk Group 1 under IEC62471 standard.

 $\ensuremath{\textcircled{2}}\xspace \ensuremath{\texttt{DMX}}\xspace$ controller, AC/DC power supply could not be installed below the ground.




Size

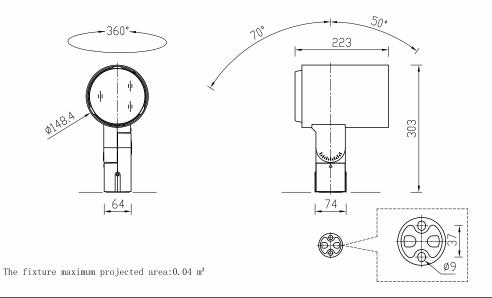


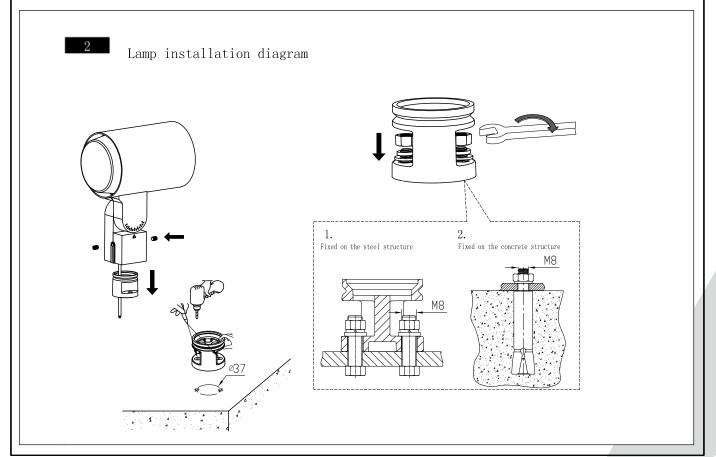






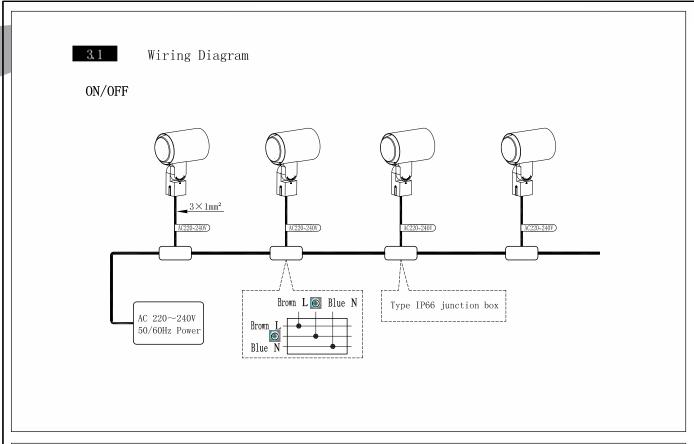

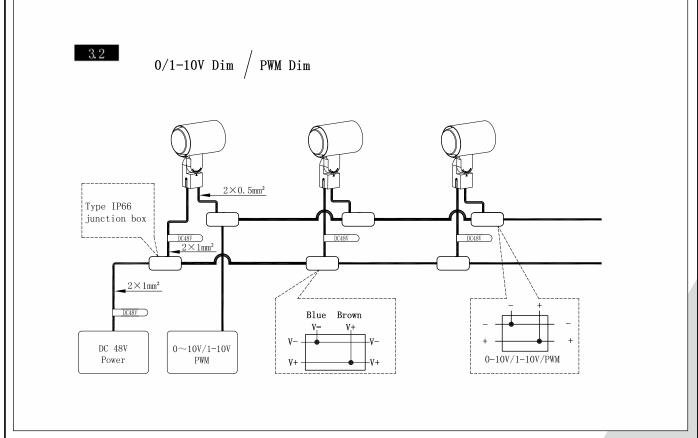






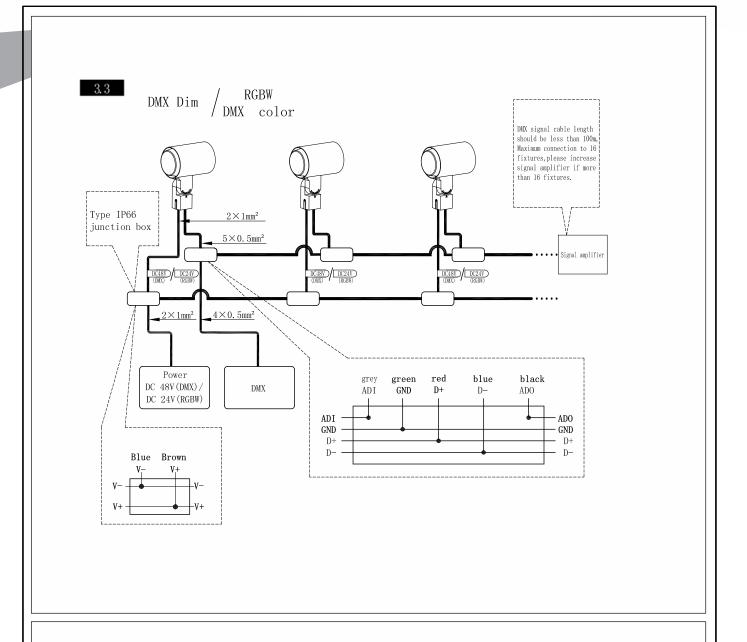

Installation Instruction Attention:



 

- 01. The fitting is suitable for fixing to the wall and to the ceiling.
- 02. Always observe the minimum distance between the lamp and the surface being lit as indicated on the icon.
- 03. IP66: Protected against water jets
- 04. Protection class: the fitting has an earthing connection. The earth wire (yellow/green) has to be connected to the clip marked with $^{\textcircled{\oplus}}$.
- 05. Immediately replace a cracked or broken safety glass and use only manufacturer approved parts.
- 06. This luminaire contains in some places very hot parts.

