


ROMUS Single 20W

USER MANUAL

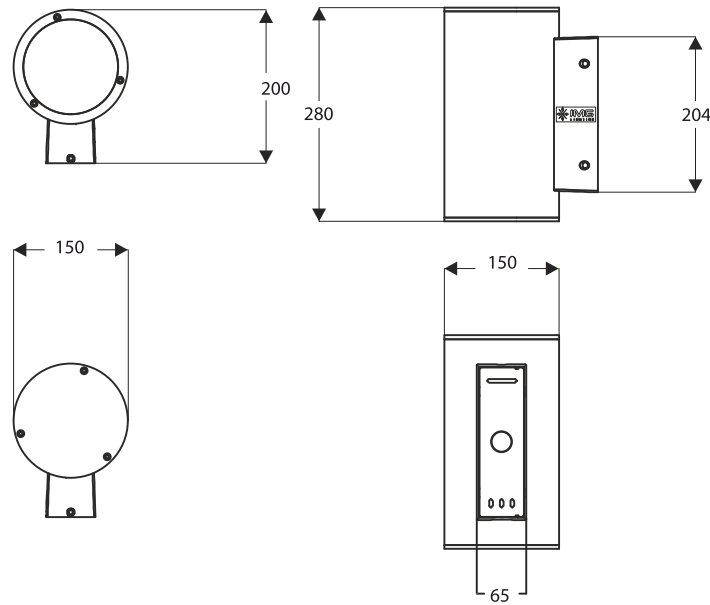

1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be advised by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.



INPUTVOLTAGE:100VAC-305VAC


(ONE OF THE LINE WITHDOUBLE COLOR GROUNDING)

FREQUENCY: 47-63hz POWER: 20W

DRIVER: MW XLG-25-A LED CHIPS: CREE CXA 1816

INSTALLATION METHOD

STEP 1

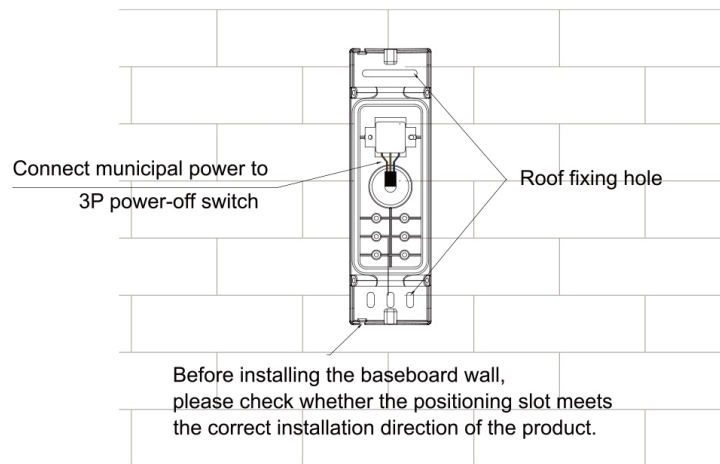

STEP 2

