


ROMUS Twin 40W

USER MANUAL

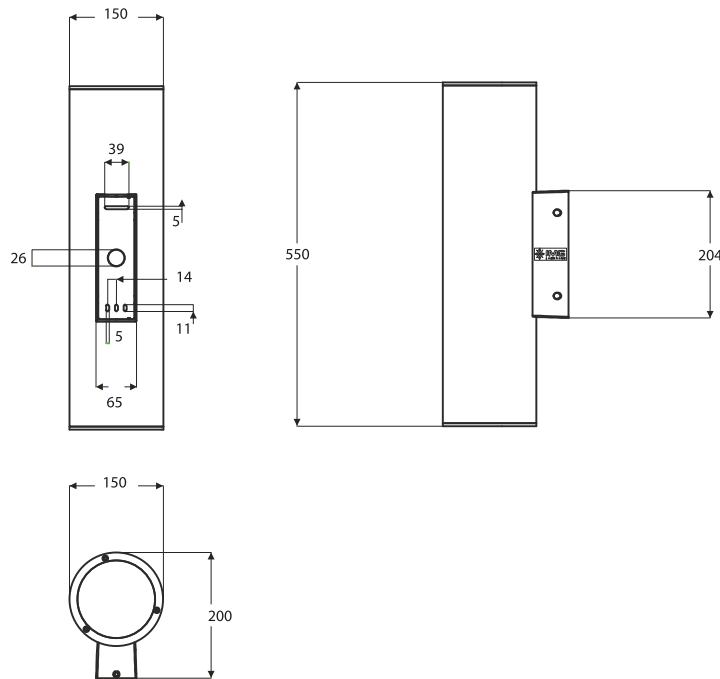

1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be advised by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.



IMG
L I G H T I N G

INPUT VOLTAGE: 100VAC-305VAC


(ONE OF THE LINE WITH DOUBLE COLOR GROUNDING)

FREQUENCY: 47-63Hz POWER: 40W

DRIVER: MW XLG-50-A LED CHIPS: CREE CXA 1816*2

INSTALLATION METHOD

STEP 1

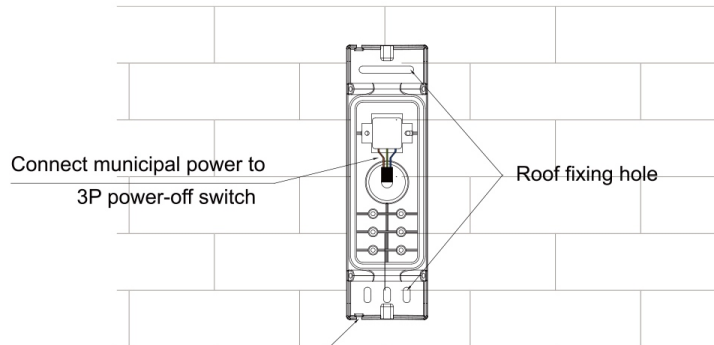

Before installing the baseboard wall,
please check whether the positioning slot meets
the correct installation direction of the product.

STEP 2

